 


# INMU USER MANUAL

 
## OVERVIEW

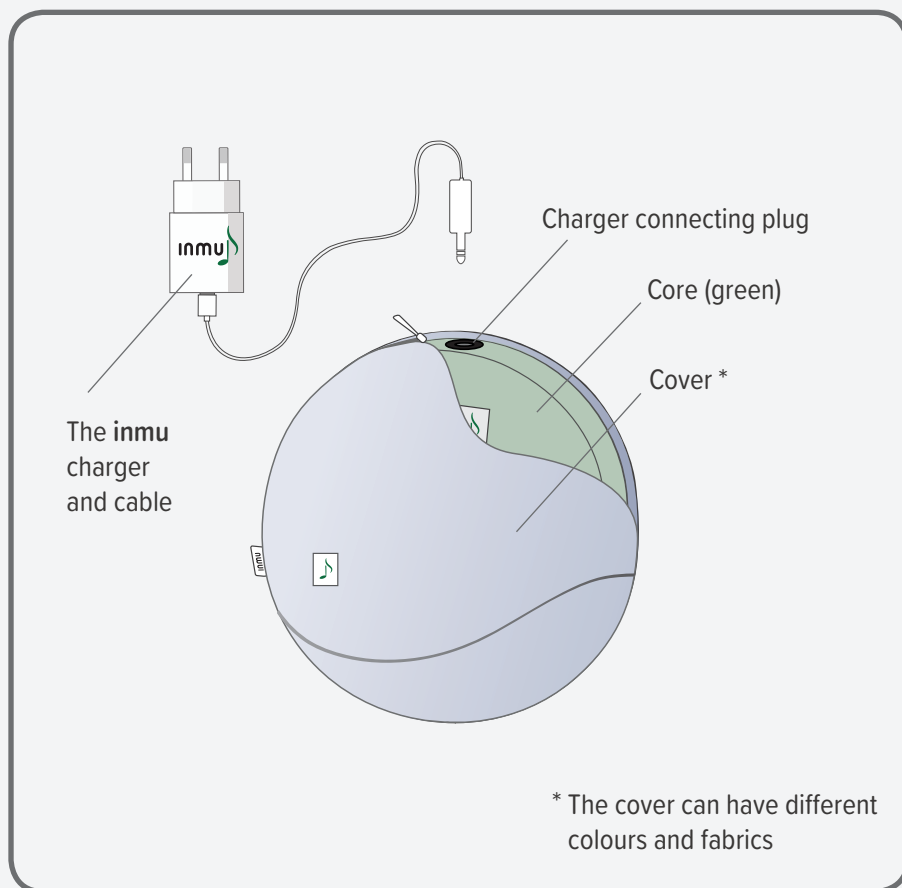

Watch the instructional videos and learn more about the inmu at [inmutouch.com/support](http://inmutouch.com/support) or contact support at [info@inmutouch.com](mailto:info@inmutouch.com)


inmu  
touch

## TURN ON

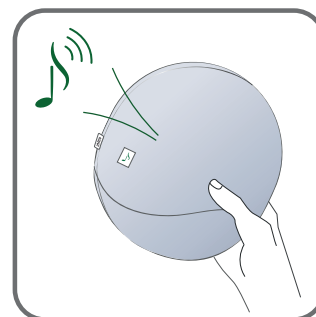


A touch activates the inmu and awakens the music. Unplug the cable if it is connected.

## TURN OFF

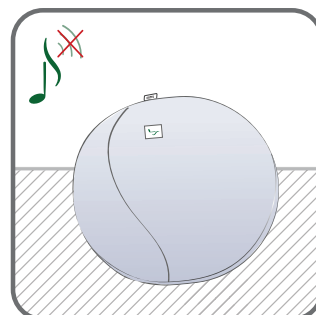 


The music automatically stops when the inmu is lying still. Please note: No cable is needed.

## DEACTIVATE

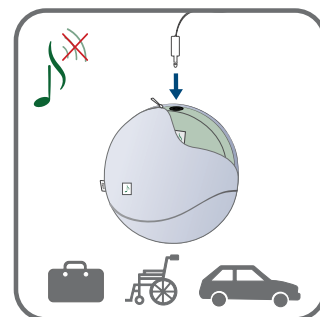 


Silent during transport: Unzip the cover and connect the cable. The inmu will stay silent until the cable is unplugged.


## WASH THE COVER

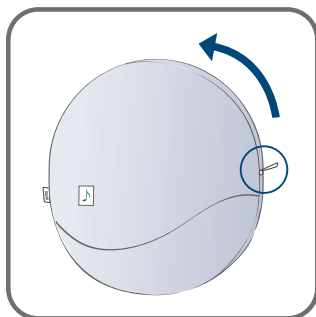 

 Find the zipper pull tab.  
Unzip the zipper.  
Take off the cover.

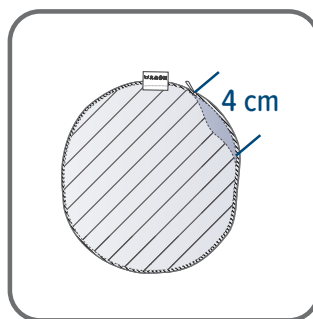

 Turn the cover inside out.  
Zip up the cover and leave  
4 cm open for easy handling.

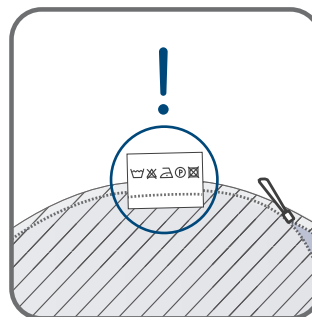


Wash according to the care  
label instructions.




Machine wash or hand wash.


## DRY THE COVER

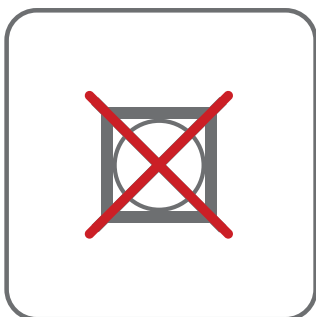 


Do not tumble dry.

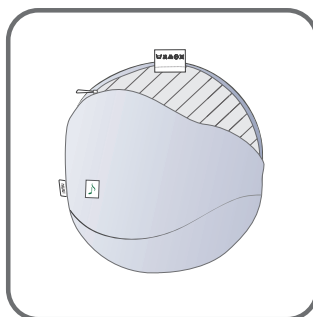 

Turn the cover right side out  
again.

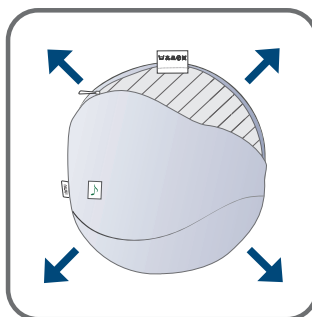 


 While still damp, carefully  
stretch the cover into shape.

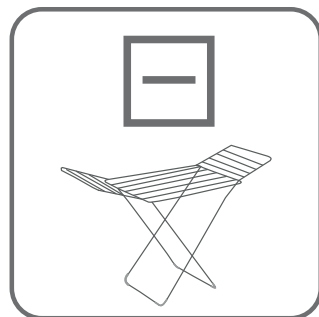


Air dry flat -  
e.g. on a towel.


## PUT ON THE COVER

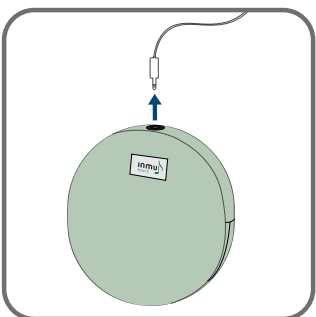 

 
Unplug the cable if the  
cable is connected.

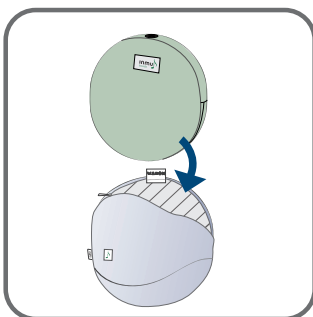

Put on the outer cover.

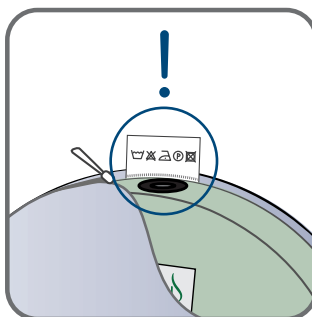 


 Please note! Make sure the care  
label and plug are aligned.

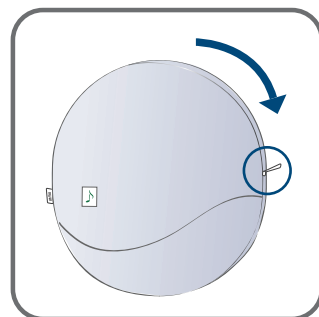


Zip up and conceal  
the pull tab.


## CHARGING

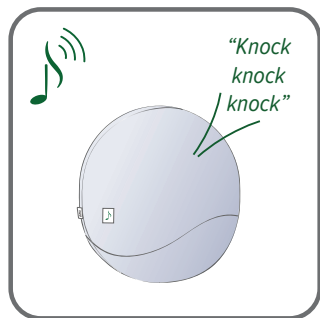 

 
When the battery level is low a “Knock, knock, knock” signal sound will be heard and the **inmu** needs to be charged.

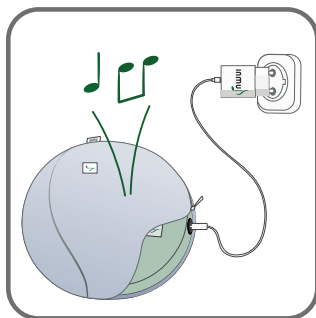

 Find the pull tab of the zipper. Unzip the cover. Connect the cable and the charger. A signal sound indicates that charging has begun.

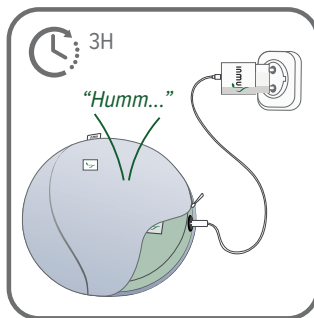


 Charging time: up to 3 hours. A “Humm...” sound will be heard until the battery is fully charged. The volume of sound reflects the battery level.

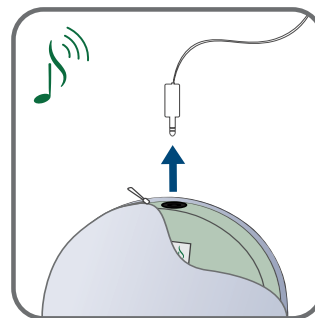


When the “Humm...” sound stops the **inmu** is fully charged. Unplug the cable, zip up the cover and conceal the pull tab.


## VOLUME (Please follow these instructions closely or watch the instructional videos at [inmutouch.com/support](http://inmutouch.com/support))

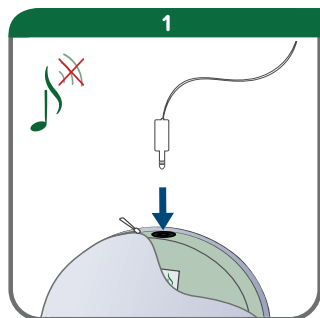 

 
1. Awake the music. Connect the cable and the **inmu** goes silent. Then immediately ...

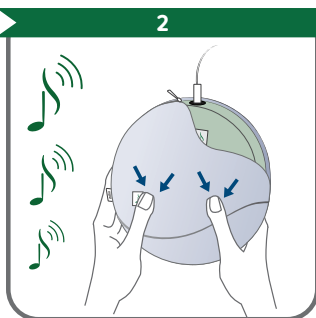

 2. ... squeeze firmly on both sides simultaneously. Listen and stop at the preferred volume: Low, medium or high and then immediately...

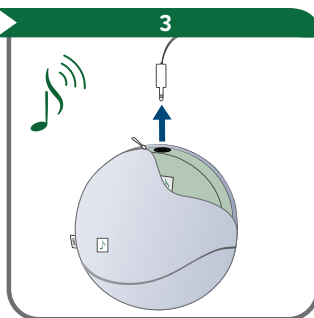

 3. ... unplug the cable to save the preferred setting. Zip up the cover and conceal the pull tab.

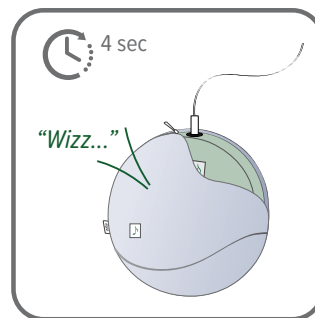

The setting should be completed within 4 sec. If a “Wizz...” signal sound is heard the new setting was not successful. Then repeat steps 1-2-3.


## MAINTENANCE



 
The **inmu** is water repellant. It can be wiped with a damp cloth.



The cover and the core can be wiped with a disinfectant tissue.

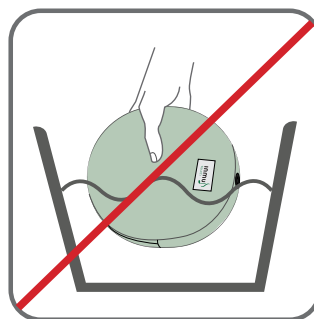


 Attention!  
The **inmu** is NOT watertight.

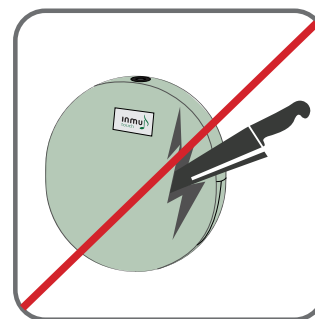

Attention! Do not disassemble the **inmu** (core).

## DISPOSAL

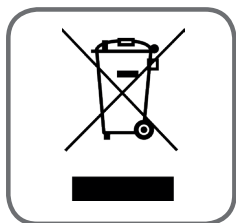 


The **inmu** has a rechargeable Lithium-ion battery, which corresponds to the EU-directive 2006/66/EC. It must not be disposed of as ordinary household waste. Please follow your local regulations for battery disposal to prevent negative impact on the environment and health.

Model name: Soprano.

Product name: **inmu**RELAX and **inmu**DANCE

## RECYCLING

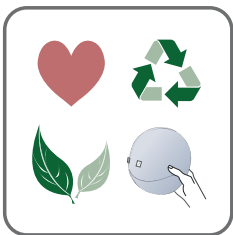 

The **inmu** is made of materials that are as sustainable, natural and hypoallergenic as possible. We make our products with care, consideration and dignity. Touch the **inmu** — enjoy it and share it with others...

Watch the instructional videos and learn more about the **inmu** at [inmutouch.com/support](https://www.inmutouch.com/support) or contact support at [info@inmutouch.com](mailto:info@inmutouch.com)

## SAFETY ADVICE



- 1 Do not attempt to disassemble the **inmu** or take off the inner cover (the core).
- 2 Avoid striking the **inmu** against sharp or hard objects.
- 3 Keep the **inmu** away from fire.
- 4 Keep the **inmu** away from flammable fluids.
- 5 The **inmu** is NOT watertight. Contact with fluids should be avoided.
- 6 Keep the charger and cable dry.
- 7 Do not leave the **inmu** outdoors or in environments with high humidity.
- 8 The **inmu** should not be used or stored at temperatures below 5° C or above 45° C.
- 9 The **inmu** should not be charged at temperatures below 10° C or above 45° C.
- 10-12 The **inmu** and battery charger should not be exposed to direct sunlight.
- 13-14 Only the original charger and cable should be used when charging the **inmu**.
- 15 The charger must not be dismantled.
- 16 The **inmu** should not be exposed to more than 100 kg of continued pressure.
- 17 The **inmu** can absorb moderate shocks only (avoid drop of more than 2 meters).
- 18 The **inmu** is not made to end in a trash can. Most parts can be reused.

## CONTACT

**inmutouch.com ApS**  
Klaking Stationsvej 20  
DK-7130 Juelsminde  
Denmark

[www.inmutouch.com](https://www.inmutouch.com)  
Email: [info@inmutouch.com](mailto:info@inmutouch.com)  
Phone: +45 51 95 50 40

